



 
 
vino bellezza

Instruction Manual



THIS MANUAL INCLUDES THE MODELS BELOW.

VINTAGE-13	RESERVE-13	DECANTER-13
VINTAGE-18	RESERVE-18	DECANTER-18
VINTAGE-21	RESERVE-21	DECANTER-21
VINTAGE-31	RESERVE-31	DECANTER-31
VINTAGE-56	RESERVE-56	DECANTER-56
VINTAGE-63	RESERVE-63	DECANTER-63
VINTAGE-81	RESERVE-81	DECANTER-81

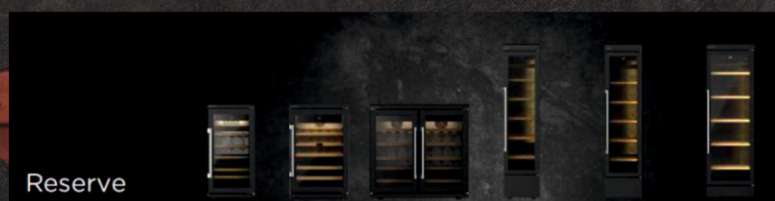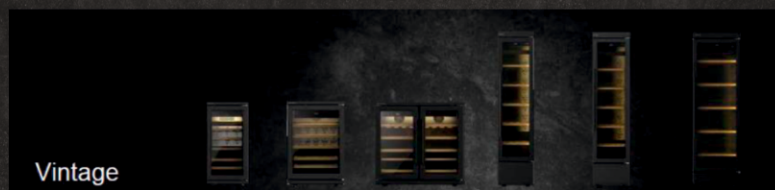



vino bellezza

Vino Bellazza means 'Fine Wine' in Italian language. So, what is fine wine? Without any doubt, every wine lover will give a different answer to this question. On the other hand, everyone agrees that a wine should be stored according to certain criteria as of its production in order for it not to lose its fineness and quality.

Wine is considered a living beverage since it continues to mature in the barrel and then in the bottle. For this reason, wine should be rested in an environment that is not exposed to the sun and bright light sources, that has a constant temperature, that is free from vibration, and that has ideal humidity.

Not every wine lover has access to this environment that can only be provided naturally by a cellar. At this point, Vino Bellezza wine coolers come into play as a saviour.

The story of Vino Bellezza started when Öztaş Demir Çelik (Steel & Iron) decided to use its knowledge and experience improving since 1980 in cooler products in the field of commercial coolers. Vino Bellezza wine coolers have emerged as a result of the R&D studies performed since then.

Comprised of three series with different advantages, Vino Bellezza wine coolers will be the new choice of wine lovers with their high performance, practical features, ergonomic and stylish designs, and most importantly, extremely affordable prices.

Whether for your kitchen, sitting room, office or boat, there is always a Vino Bellezza appropriate for you.

CONTENTS

1.	Intended Use of the Product	6
2.	Safety Warnings	6
3.	Procedures to be Completed Before the Assembly and First Operation of Your Appliance	7
3.1.	After Assembly and Installation WARNING	8
4.	Regarding Operation Performance of the Device WARNING	8
5.	General View of Your Appliance	9
6.	Installation and First Operation of Your Device	10
6.1.	Door Handle Assembly	11
6.2.	Electrical Connection	12
6.3.	Operation of Your Cooler	12
6.4.	Setting Interior Temperature of your Cooler	13
6.5.	Interior Lighting Control	14
6.6.	Error Codes	14
7.	Putting Wine in Your Cooler	14
8.	Defrosting Operation	14
9.	Turning off Your Appliance	15
10.	Cleaning, Maintenance and Transportation of Your Appliance	15
10.1.	Cleaning	15
10.2.	Maintenance	16
10.3.	Transportation	16
11.	Things to Do Before Contacting Authorized Service in Case of a Fault	17
12.	Liability Limitation	17
13.	Standards of Conformity for the Appliance	18
14.	Type Label	18



Dear Customer;

You have purchased a quality Vino Bellezza product by preferring our wine cooler device. Your device will serve you for long years as long as you provide the necessary care and maintenance.



To get to know your appliance and take advantage of all your product's functions, please read the instructions on this manual carefully.



This manual includes warnings to prevent the Device from becoming nonoperational, loss of life and property, and injuries while using the device.



These refer to warnings and cautions regarding your appliance's connection to the electricity line.



Read the User Manual.



These refer to suggestions for your cooler to work efficiently.

1. INTENDED USE OF THE PRODUCT

The product you have purchased is designed and manufactured solely for the purpose of cooling and preserving wine.

2. SAFETY WARNINGS



- Always have the demonstration and installation of your appliance performed by an authorized Öztaş service.
- Your product shall be void of warranty if you have the demonstration and installation of your appliance performed by any service other than the authorized Öztaş service and if a malfunction occurs.
- Consider all warnings provided on your appliance and in the user manual, and keep this manual for future reference to some problems that may occur.
- This appliance may be used by children above age of 8 and persons with limited physical, perceptual or mental abilities or persons with a lack of experience and knowledge if they are supervised or given instructions on the operation of the appliance and any relevant risks that may be encountered. Children shall not play with the product. Cleaning and user maintenance of the appliance shall not be performed by unattended children.
- Power cord of your cooler is fitted with a special grounded plug. This plug shall always be used with a special grounded power outlet with a rating of 10 Amperes. If no such outlet is available, have a qualified electrician install it.
- Do not use multi-sockets or an extension cord.
- Do not plug in any plugs with damaged, worn or torn cords to the outlet.
- Do not pull, bend or damage the power cord.
- Do not replace any electrical component inside the Cooler, and contact the Authorized Service when required.
- Do not plug the appliance to the outlet by hand to prevent any shocks.
- Do not allow children to play with the appliance or hold on the appliance and hang themselves. Do not hang on the doors and racks.
- Do not place explosive or flammable materials in your cooler for your safety.
- Do not allow wild animals or pets to get inside the product or play around it.
- This may damage your product or may cause injuries or death of your animal. Moreover, wild animals or pets may cause fire by damaging the wiring.
- Do not allow children to get into the product or play around it.



Please read the user manual before installing and operating your appliance. Our company shall not be held responsible for any damage due to improper operation.

3. PROCEDURES TO BE COMPLETED BEFORE THE ASSEMBLY AND FIRST OPERATION OF YOUR APPLIANCE



- Do not place your product under direct sunlight or within influence area of a stove, radiator, furnace, oven, infra-red heater or air conditioner. Otherwise, your product may perform poorly, get damaged or become inoperable.
- Electrical installation shall conform with the national regulations.
- Your electrical installation shall be equipped with residual current relays and fuses to prevent the risk of electrocution and fire.
- In case of usage without grounding, our company shall not be responsible for any faults and damages that might occur.
- Place your product away from moisture, where air circulation is provided.
- Always clean inside of your product prior to first use.
- After placing your product, allow at least two (2) hours without moving it before starting to use.
- If your cooler is installed in extreme cold conditions, waiting period before operation shall be at least Four (4) hours.
- Do not use the product in any other way than what this product is designed for.
- Your product is designed for indoor use. Do not use your product outdoors.
- Installation, placement, maintenance and cleaning of your product shall be performed as described in the manual. Do not act against the manual. Warranty shall be void due to misuse in case of any damage to your product caused by such operation.
- Frost shall be increased for products, the doors of which are kept open or are frequently opened and closed, and the appliance shall not perform the cooling operation. Thus, open the door of your product only when it is required. Ensure that the door of your product is closed when you do not require.
- Place the cooler on the ground and check if it is level with a spirit level. Adjust using the leg bolts in case of any inclination to any side. Place your cooler on its place where it shall be used after completing the setting procedure.
- Do not change the position of the product when it is loaded or do not carry it by pushing it on its castors. Do not push your cooler over cables or door thresholds to prevent damage to the castors even if the cooler is empty. Never push your cooler if the ground is not level, and if there is an inclination or stairs present in the vicinity.



Your product is set for 220 - 240 Volts and 50 Hz mains power. Use of incompatible voltage may cause your cooler to become inoperable or fire.



In the event of a sudden power outage, unplug your product. Plug your product 20 minutes after the interruption has ended to operate your product again. High voltage that occurs when the power is restored may cause fire or damage to your product.

SUGGESTION

Do not unplug your product for saving power if you shall not use your product or keep it empty for a short period. Otherwise, more power shall be used for cooling your product again.

3.1. AFTER ASSEMBLY AND INSTALLATION WARNING

- Be very careful as an impact by a sharp, tipped object or contact of a hot material to the glass part of the product with glass doors may cause the glass to break.
- In order to avoid your appliance from sliding or overturning, place the appliance on a level flat surface.
- Use your product in the operation position described in the user manual.
- Do not expose your product to direct sunlight.
- Handle and store your product in normal operation position only to protect your product against damage. Otherwise, warranty rights shall be void.
- Keep the accessories, nylon bags containing the operating manual and the key of the cooler cabinet provided with the cooler in a place where they cannot be reached by children.
- Keep the roof of your device empty.

4. REGARDING OPERATION PERFORMANCE OF THE DEVICE WARNING

- If R600a or R290 refrigerant is used in your Cooler; (you may see this information on the Rating plate on the cooler.) R600a refrigerant is an environmentally-friendly gas used in effective cooling technology. This gas may catch fire under certain conditions. You shall follow the rules below to ensure normal operating conditions.
- Keep the front of any fans both inside and outside of the cooler open to prevent blockage.
- Do not use any mechanical tools (knives, screwdrivers, etc.) to accelerate thawing in case of frost.
- Do not damage the cooling circuit.
- Do not use electrical appliances and tools inside the food storage compartment of the product.
- Installation of the appliance shall be performed by authorized personnel only to reduce the risk of flammability.
- Do not allow anyone other than the authorized service intervene the appliance for maintenance, repair or any other reason.
- Unplug the appliance and switch to defrosting position against possible frost or icing.
- Prefer original components for any parts to be replaced on the product.

5. GENERAL VIEW OF YOUR APPLIANCE

1-Fan Switch

2-Door

3-Handle

4-Adjustable Leg

5-Canopy

6- Control Unit

7- Interior Fan

8-Wooden Rack

9-Interior Lighting



6. INSTALLATION AND FIRST OPERATION OF YOUR DEVICE

Take off and remove all package materials and lower wooden pallet of your product before placing it. (It may be required to lift the cooler to remove the base bracket).

Install spare parts provided inside your appliance (Wire racks, Rack bars, etc.) as per the installation instructions. Use only genuine Öztaş spare parts. Non-genuine spare parts may cause risks for you and may damage your product.

Place your product where you desire. Consider the placing rules specified in the manual during placement.

Level your product laterally and vertically with a spirit level. Perform the levelling procedure with the adjustable legs on the front lower part of your cooler. (Fig. 1)

For models with castors (optional), castor brakes (optional) shall be locked after placing the products or if no castor brake is available, it shall be ensured that the appliance does not move.

- Place your cooler by pushing it backward.
- Place your product so that it is not inclined in any way and that it is standing on its legs or castors and then operate it.
- Make sure that you do not close the fan intake outlet while placing products inside the cooler.

SUGGESTION

- Do not place materials such as cardboards, boxes, etc. in front of the lower blinds to ensure proper cooling of your product.
- Do not expose to direct sunlight. Operating period shall be increased if sunlight hits the glass of your cooler. And this means that the power consumption shall be increased.
- Make sure that there is a clearance of 150 mm (15 cm) between the wall and the rear side of your cooler when you are bringing the product close to the wall. Air circulation should be ensured at the rear area of the coolers for efficient use.

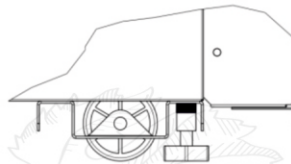 


Figure 1

6.1.DOOR HANDLEASSEMBLY

 
Reserve and Decanter model coolers are shipped with the product without door handle assembly.

Follow the instructions below when assembling the door handle for this model coolers.

1- Open the door of the cooler (Figure a)

2- Remove the upper and lower screws on the sides of the door with a screwdriver. (Figure b)

3- Place the handle that comes with your cooler into its slot on the door and assemble it with the screws you removed from the door. Make sure the screws are tightened enough. (Figure c)

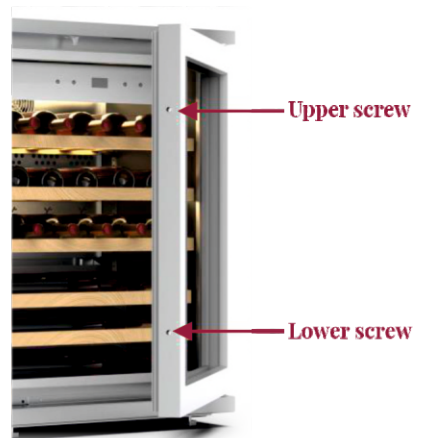

(Figure b)



(Figure c)

6.2. ELECTRICAL CONNECTION

WARNING



Do not plug your appliance to a multi-socket or do not use an extension cord.

Do not allow the cables of your product connected to the mains to contact hot surfaces.


Outlet that shall be used shall always be grounded. And the outlet that shall be used shall also be protected with a proper fuse with a rating of 10–16 A minimum. Be sure to seek help from our technical service or a qualified electrician regarding the insurance that must be present in the network to which your outlet is connected.

 
The mains voltage and frequency must be the same as the value written in the label information on the inside of your product. If mains power is far below or above the specified value, have the desired voltage by using a voltage regulator. You can get help from a qualified electrician.

Do not put the cable of your product on passage routes. These may cause injury to you and damage to your cooler.

If the power supply cable is damaged, it must be replaced by its manufacturer or authorized technical service or any other personnel qualified at the same level, in order to avoid any dangerous situation.

6.3. OPERATION OF YOUR COOLER

- Clean the inside of your product and all of its accessories before operating your product for the first time.
- If your product has been shaken a lot during transport and placement, allow at least two (2) hours before starting to use your cooler. Thus, compressor oil shall be returned if it has entered the system. You may damage the compressor if you operate the cooler without considering this.
- Plug your product to an outlet that is installed as per the legislation and that supplies a 220 – 240V/50 Hz alternative current only.
- You shall hear a slight compressor noise when your product is operated.
- Fan inside your product shall stop when you open the door of your cooler.
- Plug in your fridge and press the on/off button. (Figure 2) 

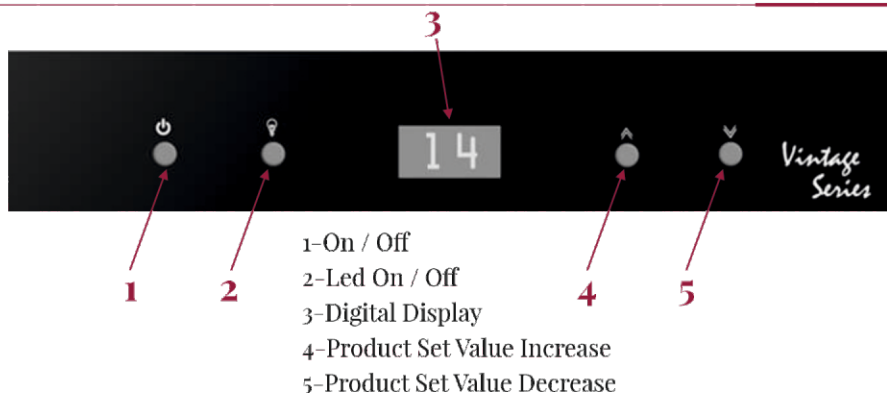


6.4. SETTING INTERIOR TEMPERATURE OF YOUR COOLER

- For Coolers with LCD Display (Option);

Temperature settings of your appliance is performed in our factory for operation in suitable conditions.

The internal temperature of your appliance can be adjusted between +5 and +20 °C. (The temperature range can be changed with the Po1 menu.)


 To change the set temperature of your cooler, press and hold up and down buttons on the control unit for 5 seconds at the same time. (Figure 2)

The last set value will be displayed on the digital display. Set the desired new set value with the temperature increase button (up button) and the temperature decrease button (down button) and wait.

When the new set value is saved, the sensor temperature (cooler core temperature) will be displayed on the digital display.



6.5. INTERIOR LIGHTING CONTROL

When the button on the control panel  is pressed, the led lamp inside the fridge will turn on. To turn it off, press the lamp button again.

6.6. ERROR CODES



The following codes will be activated in case of failures and warnings that may occur in your fridge.

EO1 Temperature Sensor Error : The internal temperature of the fridge is controlled and adjusted by this sensor. When you see this error, be sure to inform our Authorized Service.

EO2 High Temperature Error : This error occurs when the internal temperature of the fridge exceeds the set value. It gives this warning when the door is left open for a long time, when the power is cut off, when the fridge temperature rises, let the fridge work with the door closed and check that the temperature has reached the set values, if it does not reach the set value, contact the Authorized Service.

EO3 Low Temperature Error : This error occurs when the internal temperature of the fridge falls below the set value. This error may occur in highly different set changes, in this case, close the door of the fridge and wait for a while to reach the set value, if it does not reach the set value, contact the Authorized Service.

EO4 Door Open Error : The alarm is activated 15 seconds after the door is opened, and if it is not closed, it gives an audible and written warning.

Press  +  lamp and down button at the same time to stop the alarm. Alarm turns off for 10 minutes. If the error is not cleared, the alarm will become active again.

7. PUTTING WINE IN YOUR COOLER

You may load the wine bottles in your cooler when it has reached the desired temperature as empty.

8. DEFROSTING OPERATION

Your product is not equipped with a special defrost function. Your appliance shall thaw the icing on it automatically during thermostatic operation.

While your appliance prevent frosts by itself, high temperatures and humidity and frequent operation of your appliance may increase the rate of frost. The more the frost, the more the operation time. And this causes an increase in the power consumption. Turn off your appliance and make sure that the frost is removed in such a case.



DO NOT FORGET!

An evaporator without frost shall always operate with high efficiency. Water dripping from the evaporator flows to the drip pan in the compressor area. While this water is evaporated by the hot water pipe, drip pan shall be inspected and cleaned at least once a month. Your appliance shall thaw the icing on it automatically during thermostatic operation.

9. TURNING OFF YOUR APPLIANCE

- Put the Wine bottles inside the appliance to a suitable place before turning off your appliance.

-  Press the on/off button and unplug your appliance from the socket.

Perform the following if your product shall not be used for a long period;

- Clean your product. Otherwise, moisture remaining on the walls of the appliance may cause darkening on the inner surface.

If your product shall be stored in a closed environment after turning it off;

- Do not cover your product with plastic material. A plastic material may cause your appliance release odour and perspiration as it does not permeate air through it. Perspiration may cause rusting.

- If you do not keep your appliance with its door open, odour may occur inside.

Do not unplug your product for saving power if you shall go to a short vacation or you shall not use your cooler for a short time.

10. CLEANING, MAINTENANCE AND TRANSPORTATION OF YOUR APPLIANCE

10.1. CLEANING

Unplug your cooler from the outlet before cleaning.

Before performing internal cleaning, wait until the temperature of the inner parts of the appliance increases up to the ambient temperature.

Wear protective gloves during cleaning and maintenance. This will protect you against injuries.

Remove accessory parts from the appliance. Perform cleaning by using a soft cotton cloth and warm water.

Dry it by using a dry cotton cloth. If it is not dried, it may turn black in time.

Ensure that the inner surface is not wet or moist after cleaning.

You can reload your food two (2) hours after operating based on the type of operating specified within this manual.

External cleaning shall be performed with a cotton cloth and warm water.

Prevent cleaning water from entering the front dashboard and illumination section during cleaning.

Clean the door seal using only clean soapy water.

Do not work with steam cleaners. Risk of damage and injury.

Please do not touch the type plate inside the cabinet. Contains important information for Customer Service.

10.2. MAINTENANCE

The appliance does not require periodic maintenance.

10.3. TRANSPORTATION

Carry your product as per the instructions specified on the package. Do not carry your appliance as horizontal, vertical or in an inclined position or with its door open.

Protect your appliance against impacts while carrying.

Do not carry your appliance as plugged or while it is loaded.

To prevent any accident or damage to your product by falling or sliding, secure your product to the transport vehicle during transportation.

11. THINGS TO DO BEFORE CONTACTING AUTHORIZED SERVICE IN CASE OF A FAULT

PROBLEM	CAUSE	SOLUTION
Your appliance does not operate, No noise or just the fan noise.	It may be caused by the thermostat. It may be unplugged Fuse may be blown or faulty. Condenser fins may be dirty or clogged.	It shall operate again when it reaches the proper temperature. Plug it correctly. Contact a qualified electrician, clean the condenser fins.
Internal temperature of your appliance is high	Ambient temperature is very high or thermostat setting is incorrect. Rear part is very close to the wall, ventilation blind is blocked or its front is covered. Condenser fins are very dirty.	Take your appliance to a place where ambient temperature is lower. Bring the clearance between the appliance and the wall to the required distance. Clean the condenser fins.
Internal temperature of your appliance is very low	Thermostat setting is incorrect	Reset the thermostat.
Lamps of your appliance does not illuminate or only one lamp illuminates.	Lamp or adaptor is faulty	Contact the authorized service.
Excessive perspiration inside the appliance and on the window	Drainage pan exit hole may be clogged for internal perspiration. Humidity level of external environment is higher than 65% for perspiration on the window	Clean the water drainage hole. Take your appliance to a place where humidity is lower.
If odour occurs in your appliance	Drainage pan may be dirty; Interior of the cooler is not clean enough.	Clean your appliance as described in the user manual.

12. LIABILITY LIMITATION

All technical information, instructions of use, information on the operation and maintenance of the device provided in this manual includes the latest information regarding your product. The manufacturer does not assume any responsibility for damages and injuries that might be caused due to not observing the instructions in this user manual, using the device outside its intended use, unauthorized repairs, unauthorized modifications on the device and using spare parts not approved by the manufacturer.

13. STANDARDS OF CONFORMITY FOR THE APPLIANCE

Coolers specified in the user manual are manufactured and tested as per the

TS EN ISO 23953-1

TS EN ISO 23953-2

TS EN 60335-2-89

IEC 60335-2-89 Standards, and

2006/95/EC

2004/108/EC

Directives.

Complies with EEE Regulation. (Regulation on the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment)


Complies with WEEE Regulation. (Directive on the Control of Waste Electrical and Electronic Equipment)

14. TYPE LABEL

Since the technical data for the product differs in each product, it is indicated on the Type label on the cabinet.

The type label is located on the inside of your cabinet.

Below is the Type label image.

TYPE LABEL	
MODEL	
Type	
Climate Class	
Power /Current W	
Voltage / Frequency V/Hz.	
Lamp power W	
Refrigerant	
External Dimensions of the Product (w*d*h)(mm)	
Weight of Appliance (kg)	



Please do not tear the type plate inside the fridge. Contains important information for Customer Services.

Address

**ÖZTAŞ GLOBAL SOĞUTMA TEKNOLOJİLERİ VE
METAL SANAYİ TİCARET ANONİM ŞİRKETİ**

M.O.S.B. 4. Kısım Ahmet Nazif Zorlu Bulvarı No:32
Yunusemre / MANİSA

Phone

+90 236 213 12 12

Fax

+90 236 213 12 08

Web

www.oztasdemir.com.tr
www.vinobellezza.com

vino bellezza

